

Munchkin Blower Change Out Instructions

The following instructions are to be used when changing a blower on a Munchkin that has an **AIR SWITCH ONLY** ! 1. Remove red rubber cap covering the air hole of the Munchkin Blower as shown in Figure 1

2. After replacing the blower take the clear plastic tube from the air switch and fit it snugly over the air inlet (shown in figure 2). You may need to disconnect mox wiring connectors in order to access the area.

WARNING – NEVER REMOVE THE CAP WITHOUT CONNECTING THE CLEAR PLASTIC HOSE. THIS WILL CAUSE DAMAGE TO THE UNIT AND LEAKAGE OF COMBUSTION GASES INSIDE THE CABINET.

WARNING - MUNCHKIN BLOWERS WITHOUT AN AIR SWITCH WILL NOT REQUIRE THE REMOVAL OF THE RUBBER CAP ON THE BLOWER. REMOVAL OF THIS CAP WILL CAUSE DAMAGE TO THE UNIT AND LEAKAGE OF COMBUSTION GASES INSIDE THE CABINET.

NOTE : A **WARNING** INDICATES A CONDITION OR HAZARD WHICH MAY CAUSE SEVERE PERSONAL INJURY, DEATH OR MAJOR PROPERTY DAMAGE.

© 2004 Heat Transfer Products, Inc.



Figure 1

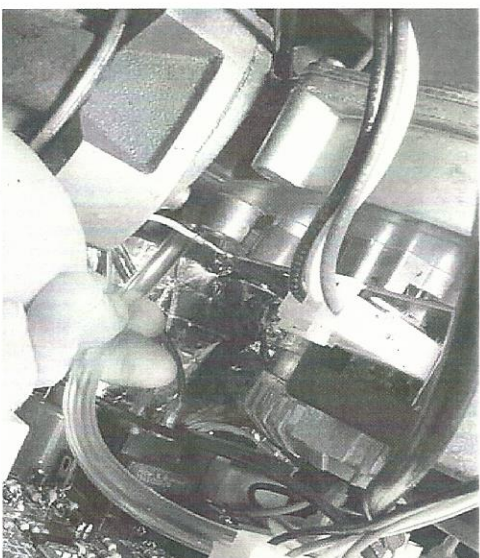


Figure 2

For the following Boiler Models:

-T50M
-T80M
-80M

Required BLOWER MOTOR
7250P-085

For the following Boiler Model:

-140M
Required BLOWER MOTOR
7250P-086

For the following Boiler Model:

199M
Required BLOWER MOTOR

7250P-087

LP-134
Rev/1/1/04